

イヤークッションの取り外し

1. イヤークッションを外側へ向けます。



2. イヤークッションの内側に指を差し込み、円周の外側へ引っ張るように外して行きます。

※ 溝に入っているイヤークッションの縁部分を引っ張り出すようにゆっくり外してください。



イヤークッションの取り付け

1. 周囲の溝にイヤークッションの縁を差し入れます。



2. 差し入れた部分を押しさえながら、残りの縁部分も納めて行きます。

※ イヤークッションの内側に指を差し込み、縁部分を引っ張り込むようにはめ込んでください。



3. イヤークッションが溝の全周に均一に納まるように調節します。

※ イヤークッションをやや回転させるように動かし、整えてください。



Detaching the Ear Pad

1. Orient the ear pad so that it faces outward.



2. Insert a finger into the inner side of the ear pad and gradually detach it by pulling outward along the circumference.

** Detach slowly so as to pull out the edge portion of the ear pad that is in the groove.*



Attaching the Ear Pad

1. Insert the edge of the ear pad into the groove around the circumference.



2. While holding down the inserted portion, gradually fit the remaining edge portion into the groove.

** Insert a finger into the inner side of the ear pad and fit it into place by pulling the edge portion inward.*



3. Adjust so that the ear pad is evenly fitted into the groove over the entire circumference.

** Rotate the ear pad slightly to adjust it.*

